


Collect the Facts ... Discover the Difference!



"Why settle for less when a better alternative is available. Buy the best."

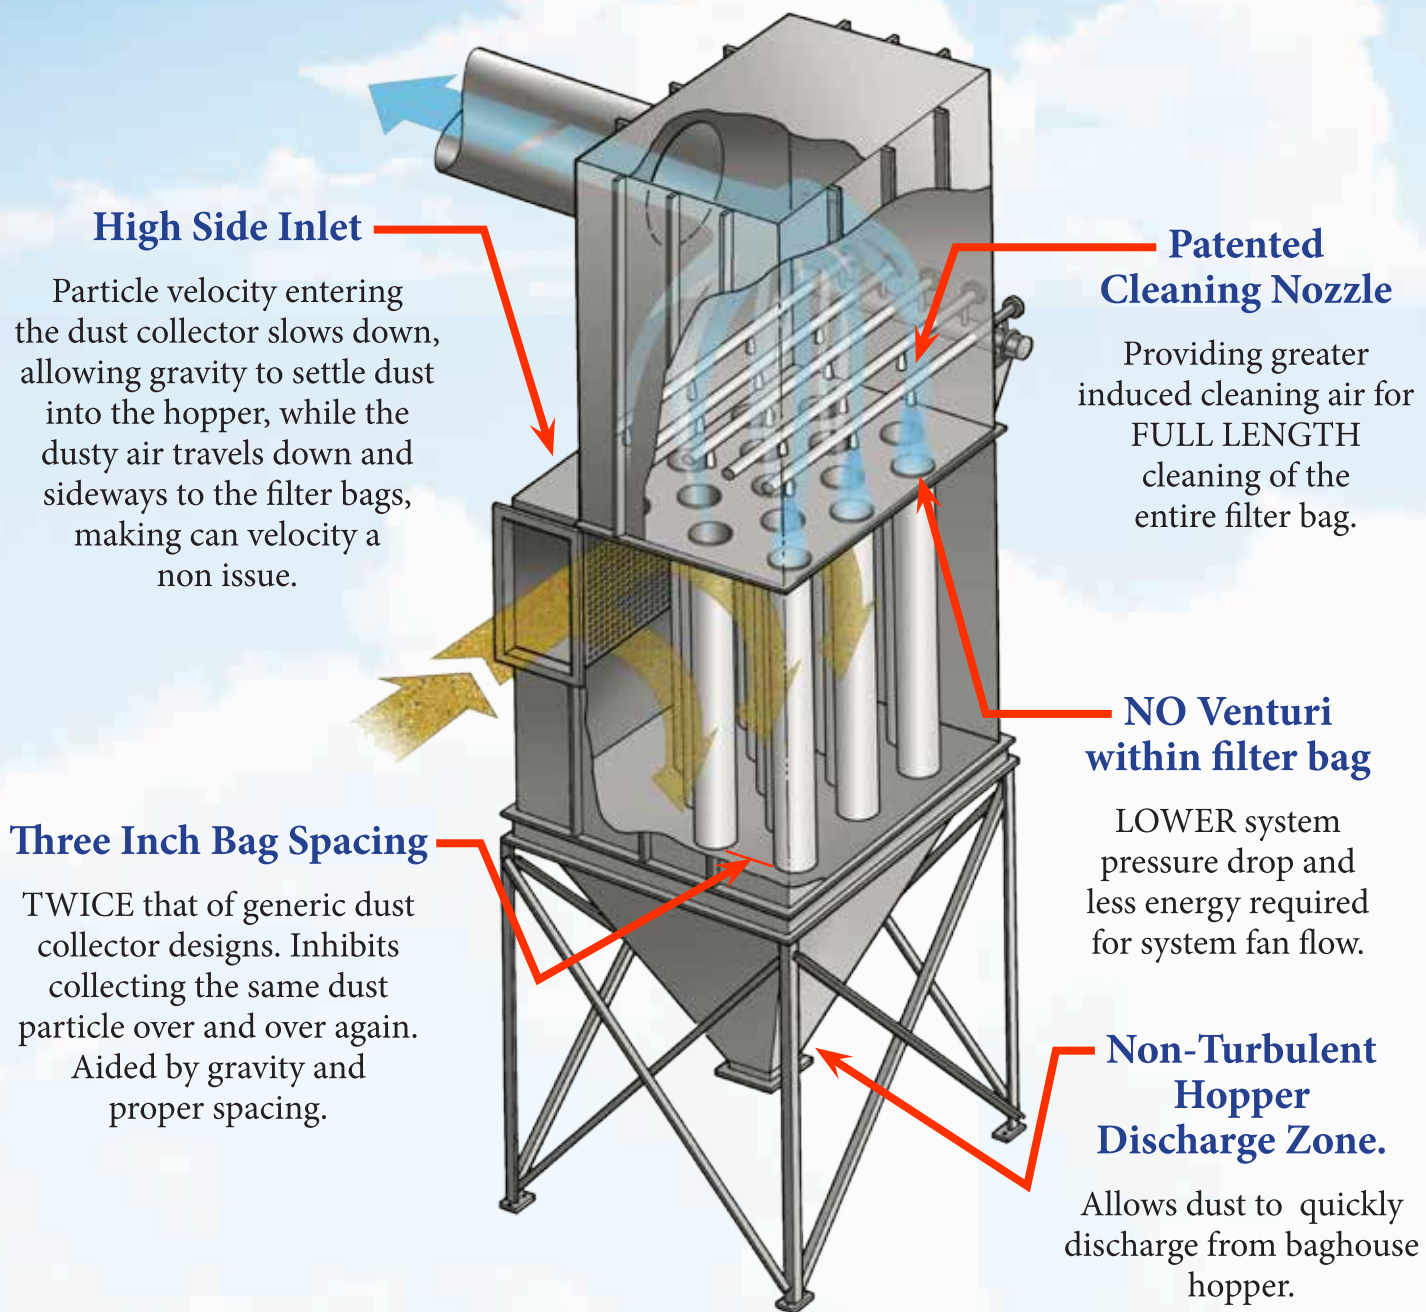

**SCIENTIFIC
DUST COLLECTORS**

4101 W. 126th Street + Alsip, IL 60803 USA
ph 708.597.7090 + fx 708.597.0313

www.scientificdustcollectors.com
A Venturedyne Ltd. Company

Why is Scientific Dust Collectors' Baghouse Superior?

Why use a high side inlet?

- Creates a downflow pattern leading the dust particles towards the hopper
- Lower can velocity than generic upward air flow systems that have the inlet in the bottom
- Provides a baffled drop out section that reduces loading on the bags

Why use a supersonic cleaning nozzle?

- Our patented cleaning system is unique to SDC and replaces generic drilled blowpipe holes
- This allows SDC to eliminate the internal venturi at the top of the bag/cage
- Our heavy duty design has been proven in the field for over 33 years

What is the advantage of no venturi?

- Much less pressure drop across the tube sheet. (4" flange to flange)
- No flow restriction at the top of the bags, allowing for three times the clean air to be induced
- Higher filtration efficiency due to a more even dust cake build-up

Why larger bag spacing? (3" between bags)

- Reduces dust bridging or packing between bags
- No puffing of dust from bag to bag and row to row during cleaning cycle

How does SDC save you Energy?

- Horsepower/electricity savings from 2" less static on the fan than all other venturi based baghouses
- Compressed Air savings (clean with 80psi vs. generic 100psi)

How does SDC save you money?


- Longer filter life, guaranteed
- Less downtime for fewer bag changes
- Energy Savings on fan and compressed air
- Smaller Footprint
- Fewer replacement parts (less bags, cages, and valves)



Generic Hopper Inlet



SDC High Side Downflow

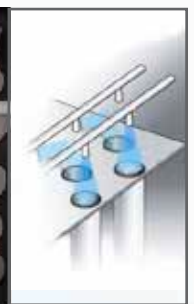

**SCIENTIFIC
DUST COLLECTORS**

4101 W. 126th Street + Alsip, IL 60803 USA
ph 708.597.7090 + fx 708.597.0313

www.scientificdustcollectors.com
A Venturedyne Ltd. Company